STR7 FAMILY

STR73x

Demonstration Software

USER MANUAL

Rev. 1

September 2005

USE IN LIFE SUPPORT DEVICES OR SYSTEMS MUST BE EXPRESSLY AUTHORIZED.

STMicroelectronics PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF STMicroelectronics. As used herein:

1.Life support devices or systems are those which (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided with the product, can be reasonably expected to result in significant injury to the user.

2. A critical component is any component of a life support device or system whose failure to perform can reasonably be expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

STR73x Demonstration Software

USER MANUAL

1 INTRODUCTION

This document describes the demonstration software running on the STR73x-EVAL evaluation board, which you can be used to evaluate the capabilities of the microcontroller and the on-board peripherals.

The demonstration software contains a main application divided into various smaller applications. It is already stored in the embedded flash memory of the microcontroller on the evaluation board. You can also download it from http://www.st.com/mcu and program it in the STR73x flash.

Table of Contents

1 INTRODUCTION 3

2 FUNCTIONAL DESCRIPTION 6

2.1 POWER CONTROL 7
2.2 CLOCKING 7
2.3 RESET CONTROL 7
2.4 DEBUG JTAG INTERFACE 7
2.5 PROTOTYPE AREA 7
2.6 DISPLAYS 7
2.6.1 LCD 7
2.6.2 LED 7
2.7 INTERFACES 8
2.7.1 RS232 8
2.7.2 CAN 8
2.8 SERIAL EEPROM 8
2.9 MISCELLANEOUS PERIPHERALS 8
2.9.1 10-bit Analog to digital converter 8
2.9.2 Push buttons 8
2.9.3 Buzzer 8

3 RUNNING THE DEMONSTRATIONS 9

3.1 MENU 9
3.1.1 Welcome screen 10
3.1.2 Navigation 10
3.2 CLOCK SOURCES 11
3.3 APPLICATION 12
3.3.1 Time Settings 12
3.3.1.1 Time 13
3.3.1.2 Date 14
3.3.1.3 Alarm 14
3.3.2 Low-power modes 15
3.3.2.1 STOP 16
3.3.2.2 HALT 17
3.3.2.3 Run 18
3.3.3 Temperature 18
3.3.3.1 Celsius Unit 19
3.3.3.2 Fahrenheit Unit 19
3.3.4 Melodies 19
3.3.4.1 Single Mode 20
3.3.4.2 Single Repeat Mode 21
3.3.5 Period Measure 21

3.3.6 Board test 22
3.3.6.1 Start Test 23
3.3.6.2 Test Report 26
3.3.7 Screen Saver 27
3.4 SOFTWARE ARCHITECTURE 28

2 FUNCTIONAL DESCRIPTION

The STR73x microcontroller evaluation board provides a development and demonstration platform for STR73x-based applications. It is designed to allow you to try out the major functions of the STR73x microcontroller.

The following picture summarizes the main functional blocks of the evaluation board:

Figure 1. Evaluation board overview

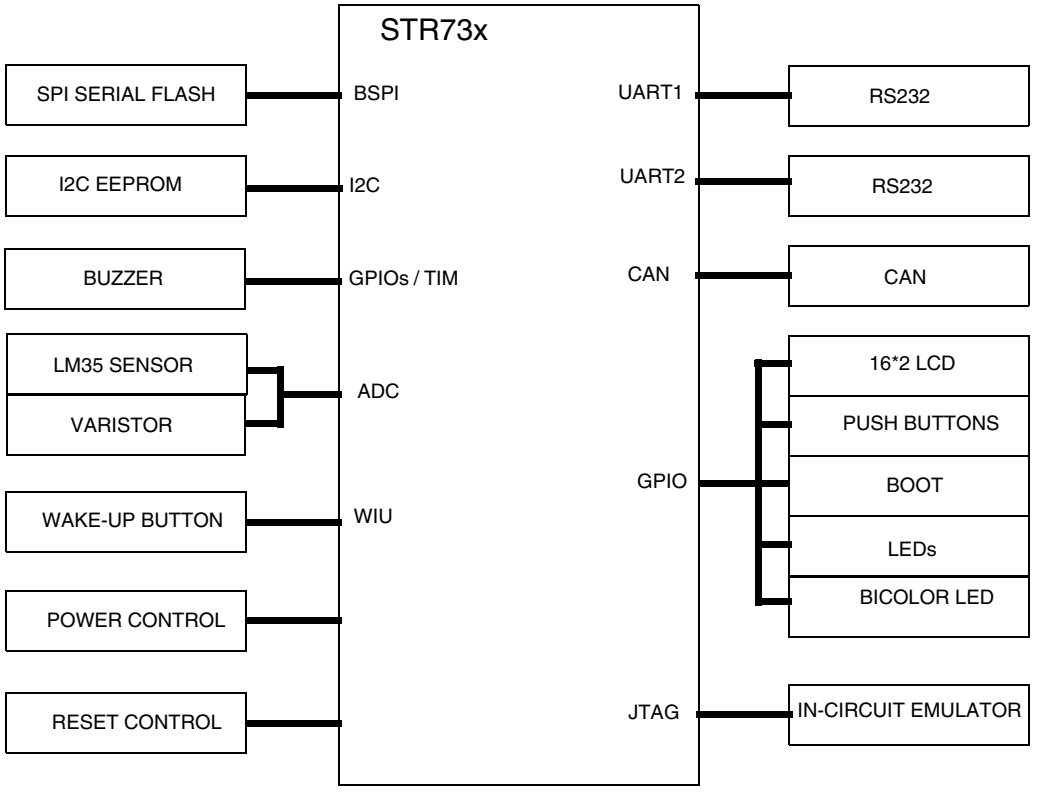

2.1 POWER CONTROL

The STR73x microcontroller family is powered by an external supply 5V (V_{DD} = AV_{DD}: 4.5 to 5.5V). All I/Os are 5V-capable.

The evaluation board is powered by an external 5V supply.

2.2 CLOCKING

The STR73x internal clocks are derived from two sources:

– Clocking is provided by a mounted 8 MHz external quartz.

– On-chip RC Oscillator (Backup oscillator) : ~2 MHz or ~32 KHz

2.3 RESET CONTROL

The Reset can be generated by hardware or software sources:

– Reset button: activates the RESET input when pressed.

– A JTAG reset

– A software reset

2.4 DEBUG JTAG INTERFACE

Software debug is done via the standard ARM JTAG connection: 20 pins IDC to connect to the standard ARM host interface.

2.5 PROTOTYPE AREA

A 2.54*2.54 mm gridded area of 1mm holes is available for prototyping using wire wrap or similar prototyping techniques

2.6 DISPLAYS

2.6.1 LCD

16 characters * 2 lines LCD display connected to GPIOs.

2.6.2 LED

– Red LEDs: Connected to 16 General Purpose Input Output pins.

– Bicolor LED: Connected to 6 General Purpose Input Output pins.

– SMD LED: Showing the status of the Power 5V.

2.7 INTERFACES

2.7.1 RS232

The STR73x evaluation board (STR73x-EVAL) provides two on-board RS-232 serial ports that are driven directly by the Two embedded UART.

Both these RS232 ports are terminated by DB9 connectors.

2.7.2 CAN

The STR730 CAN manages a single DB9 connector with two switch-selectable low speed (L9669) or high speed (L9615 or L9616) transceivers.

2.8 SERIAL EEPROM

– I2C EEPROM : 8-Kbit connected to the I2C0 interface

– SPI EEPROM : 8-Kbit connected to the buffered serial peripheral interface BSPI2

2.9 MISCELLANEOUS PERIPHERALS

2.9.1 10-bit Analog to digital converter

– Varistor: ADC channel0 connected to an on board variable resistor. The variable resistor provides a voltage in the range of 0 to 5V.

– LM35 sensor: ADC channel1 is connected to the LM35 output voltage.

2.9.2 Push buttons

The following push buttons are provided:

– NEXT: programmable switch

– PREV: programmable switch

– SEL: programmable switch

– BACK: programmable switch

– RST: board reset

– WAKE-UP: push-button to wake-up the processor from low power modes

2.9.3 Buzzer

– Piezo buzzer: OCPMA0 or OCPMA1 can be connected to the on-board piezo buzzer through switcher SW10.

3 RUNNING THE DEMONSTRATIONS

3.1 MENU

Figure 2. Structure of the Demonstration Menus

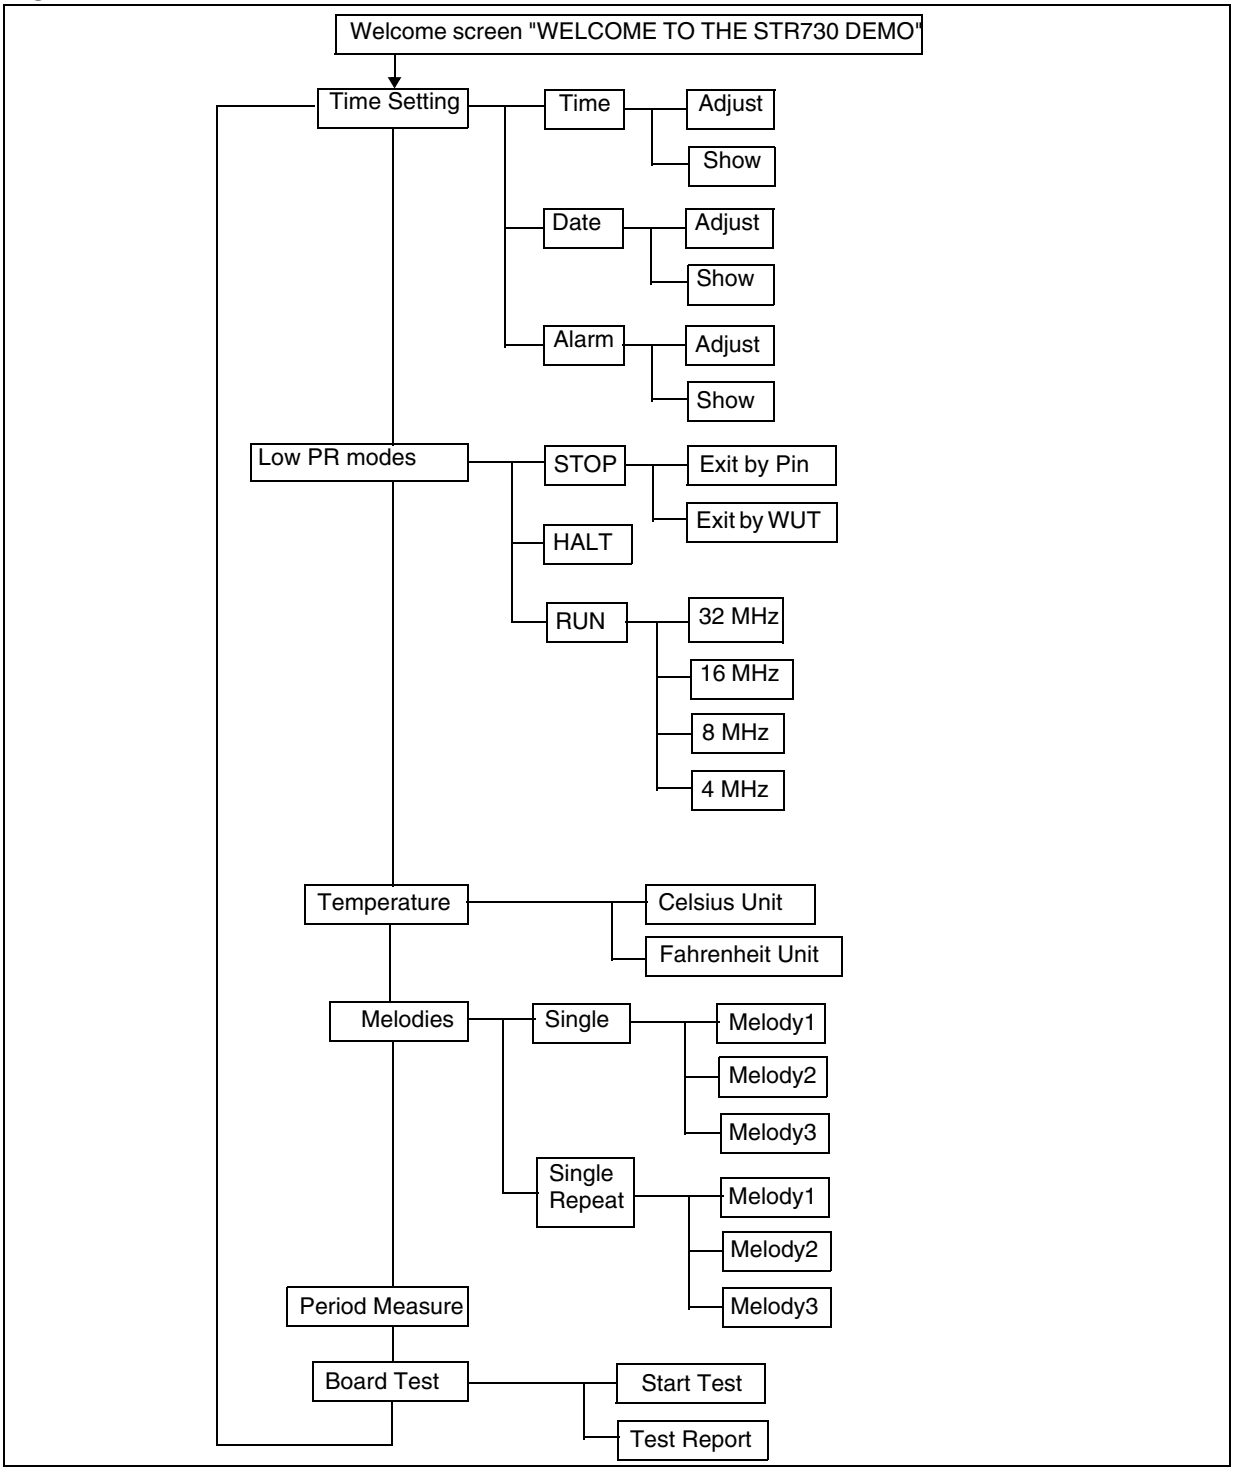

The above figure shows the menu system of the STR73x demonstration. The column to the left displays the main menu. "NEXT" and "PREV" push-buttons allow you to navigate between the items in the menu. To enter a sub-menu, press the "SEL" push-button. To exit a sub-menu press the "BACK" push-button.

3.1.1 Welcome screen

The following table summarizes which peripherals are used in this part of the software:

Table 1. Peripherals used by Welcome screen software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
EIC	NEXT/PREV/SEL/BACK buttons (navigating through the menus)

After a board RESET, a scrolling message appears on the LCD: *"WELCOME TO THE STR730 DEMO"* as shown in the figure below.

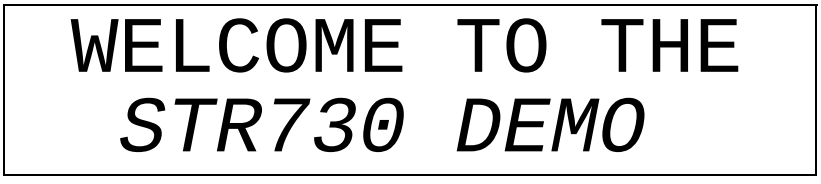

Then the application enters in the main menu and displays the first menu item *"Time Settings"*.

Note: When the board is powered up for the first time, you have to set the date and time in the "Time Settings" menu.

3.1.2 Navigation

The demonstration menu is based on circular navigation, sub-menu, item selection and back capability as follows:

Figure 3. Navigating in the demonstration menus

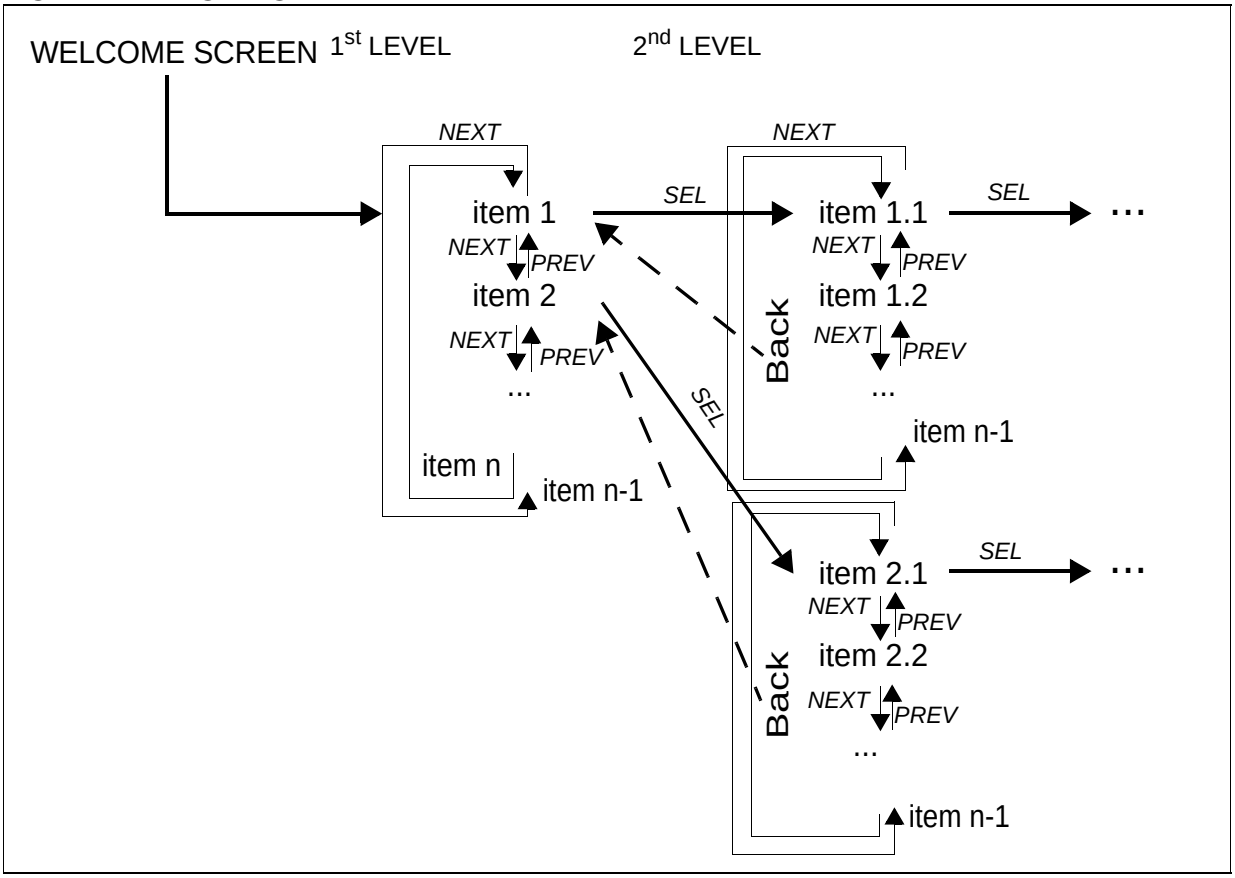

The user navigates using the “NEXT”, “PREV” ,“SEL” and “BACK” push buttons located on the evaluation board.

– “NEXT” and “PREV” buttons perform circular navigation in the current menu items
– “SEL” button selects the current item
– “BACK” jumps to the higher level menu.

When the demonstration menu is activated, the following message is displayed on the LCD

```
previous level
 menu item
```

3.2 CLOCK SOURCES

The STR730 internal clocks are derived from two sources: mounted 8 MHz quartz and an on-chip RC Oscillator (2 MHz or 32 kHz).

In this demo application, the MCLK frequency is set to 32 MHz and the external clock frequency EXTCLK is set to 31,25kHz in normal running mode. Some peripherals such as TB0, TB1, TB2, WDG and RTC are clocked by the EXTCLK.

The MCLK clock can be changed only in the "Run" sub-menu: it can be 32 MHz, 16 MHz, 8 MHz or 4 MHz.

Figure 4. Clock Control

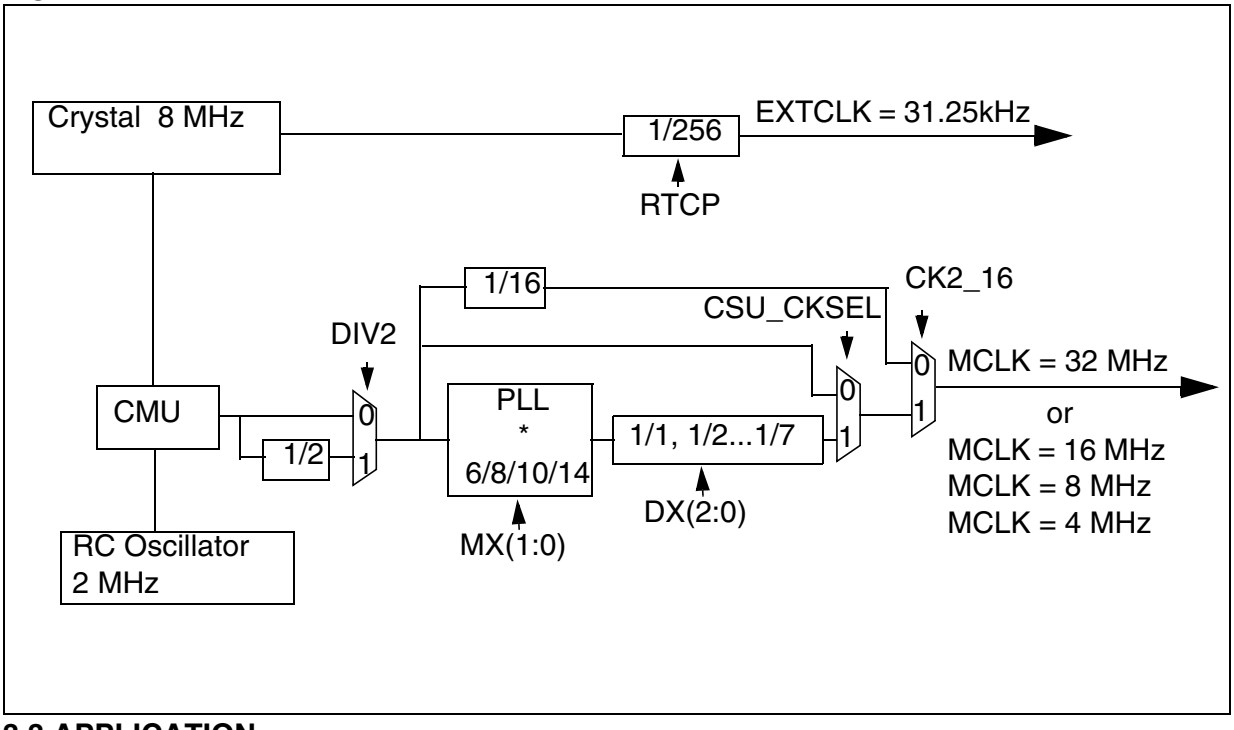

3.3 APPLICATION

The following section provides a detailed description of each part of the demonstration.

Notes:

– In the demonstration, the core runs at MCLK=32 MHz.

– The external clock is set to EXTCLK=31.25 kHz

– Red LEDs connected to GPIO4 are always blinking with a frequency depending on the core clock.

– Bicolor LEDs connected to the GPIO2 switch continuously from red to green with a frequency depending on the core clock.

3.3.1 Time Settings

The STR730 provides a Real Time Clock (RTC) which provide a set of continuously running counters that can be used, with suitable software, to implement a clock-calendar function. The counters values can be written to set the current time of the system.

This sub-menu is used to configure some miscellaneous functions such as time, date and alarm.

Table 2. Peripherals used by Time Settings software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
	P3.0 ADC channel0
TIM2	GPIO4 delay for blinking red LEDs
PWM0..5	GPIO2 blinking bicolor LEDs
PWM1	GPIO2 delay for blinking bicolor LEDs
EIC	NEXT/PREV/SEL/BACK buttons (navigating through the menus)
	GPIO2 delay for blinking bicolor LEDs: PWM1
	GPIO4 delay for blinking red LEDs: TIM2
RTC	Setting the time, date and alarm
TIM1	Generate the alarm notes frequencies
TB2	Count the alarm notes duration
ADC	Adjust sound volume using potentiometer
I2C	Read Alarm melody data from I2C EEPROM

3.3.1.1 Time

This sub-menu is divided in two items allowing the user to display or to adjust the current time.

– **Adjust:** After the evaluation board is powered up the user has to select this sub-menu to change the default time (00:00:00) to the current time. Once "Adjust" is selected, the first digit of the hour field is ready to be changed. Pressing the "NEXT" button will display the current value plus one. Pressing the "PREV" button will display the previous digit value. To change the digit value, press "NEXT" or "PREV". After choosing the digit value press SEL, the cursor jumps automatically to the next digit. When all the time digits are set, you need to press the "BACK" button to exit from the "Time Adjust" sub menu. Some digit values are limited to a range of values depending on the field (hour, minute or seconds). The following message (with the default time or the current time) is displayed on the LCD when this sub-menu is selected:

– **Show:** this item displays the current time or the default time. The following message is displayed on the LCD when this sub-menu is selected:

3.3.1.2 Date

This sub-menu is divided in two items allowing the user to display or to adjust the current date.

– **Adjust:** This item has to be selected after each power-up in order to set the current date. The user is asked to fill the current date to be stored in the application memory. The date is displayed on 8 digits: MM/DD/YYYY. The date value 01/01/2005 is displayed when you enter this menu for the first time after power-up. The first digit of the month field is ready to be changed. To change the digit value it is needed to press "NEXT" or "PREV". Pressing "NEXT" button will display the current value plus one, pressing "PREV" button will display the previous value. After choosing the digit value press "SEL", the cursor jumps automatically to the next digit. When all the date digits are set, press the "BACK" button to exit from the "Date Adjust" sub menu. Some digits values are limited depending on the field (month, day or year). In case of a re-adjust of the date, the current date value is shown. The following message is displayed on the LCD when this sub-menu is selected:

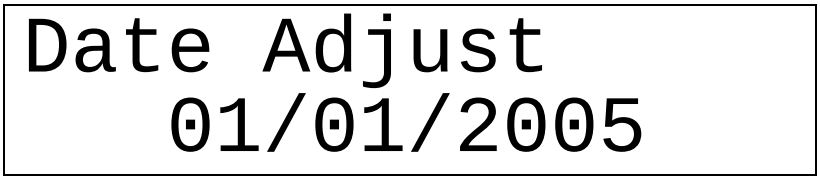

– **Show:** this item displays the current date. The default date displayed after power up and before using the Adjust item application is 01/01/2005. The following message is displayed on the LCD when this sub-menu is selected:

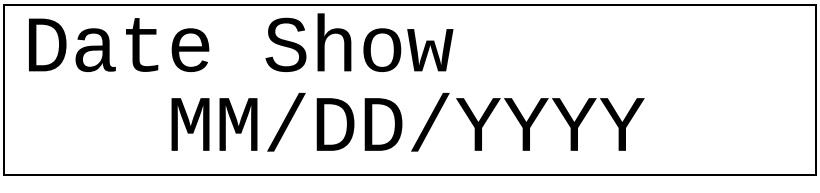

3.3.1.3 Alarm

By means of this Sub-menu the user can configure the time when an alarm can be activated. When the alarm time value is reached the alarm sound is generated in addition of sequence of

LED blinking. The Alarm melody is loaded in the I2C EEPROM at the start of the demonstartion then it is read and played when an alarm occurs. The alarm volume can be adjusted using the potentiometer. This sub-menu is divided in two items to display or to adjust the current Alarm**.**

– **Adjust:** the alarm adjust is reached by the same procedure as the Time Adjust Submenu.

– **Show:** this item displays the current alarm time. The default Alarm displayed after power up and before using the Adjust item application is 00:00:00. The following message is displayed on the LCD when this sub-menu is selected:

3.3.2 Low-power modes

The STR730 microcontroller provides different operating modes in which the power consumption is reduced. The purpose of this menu is to show the behaviour of the microcontroller in different low-power modes. STOP and HALT mode are taken as examples.

Figure 5. Peripherals used by Low Power modes software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
TIM2	GPIO4 delay for blinking red LEDs
PWM0..5	GPIO2 blinking bicolor LEDs
PWM1	GPIO2 delay for blinking bicolor LEDs
EIC	NEXT/PREV/SEL/BACK buttons (navigating through menus)
	GPIO2 bicolor LEDs blinking delay: PWM1
	GPIO4 red LEDs blinking delay: TIM2
	Interrupt when the WAKE-UP push-button is pressed: WIU
WIU	Entering STOP mode
	Wake-up the system from STOP mode (external interrupt)
WUT	Wake-up the system from STOP mode (end of timer count)
PRCCU	Clock setting
CMU	Clock monitoring

3.3.2.1 STOP

This menu allows you to put the STR730 in STOP mode. The software performs the specific sequence of instructions needed to enter STOP mode. STOP mode is characterized by:

* Possibility to turn off the RC Oscillator
* Main Oscillator turned off (if RTC module is not running)
* Minimum power consumption
* Automatic context saving

In this application, there are two ways to make the STR730 exit from STOP mode:

– In the first one, the WAKE-UP push button (connected to Wake-up line16) is used to exit the MCU from STOP mode. The following message is displayed on the LCD:

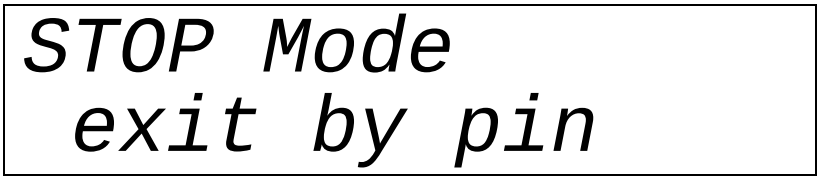

The red LEDs continue blinking until the "SEL" push button is pressed, then the system enters STOP mode and the following message is displayed on the LCD:

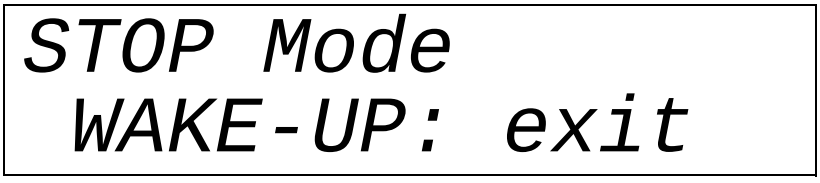

The MCU will remain in STOP mode unless the WAKE-UP push button is pressed. Once this button is pressed, the MCU exits from STOP mode. Then the system clock is set to 32 MHz and the application continues its execution.

– In the second case, the Wake Up Timer (WUT) will wake-up the MCU from STOP mode after 10 seconds. The following message is displayed on the LCD:

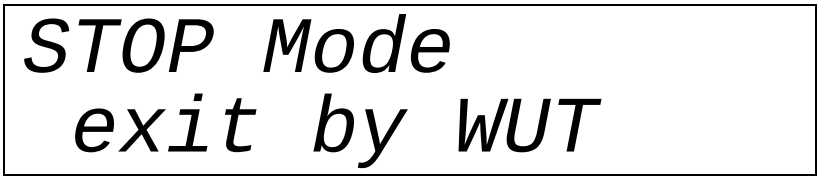

The red LEDs continue blinking until the "SEL" push button is pressed, then the system enters STOP mode and the following message is displayed on the LCD:

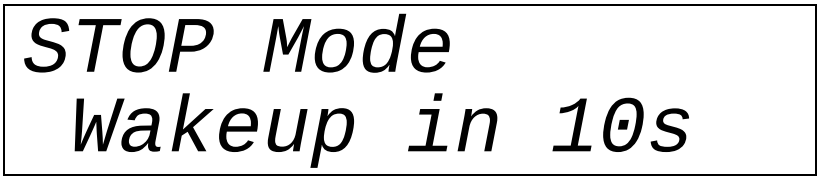

After 10 seconds have elapsed, the system exits from the STOP mode. Then the system clock is set to 32 MHz and the application continues its execution.

3.3.2.2 HALT

This menu allows you to put the STR730 in HALT mode. The software performs the specific sequence of instructions needed to enter HALT mode. HALT mode is characterized by:

* RC Oscillator turned off
* Main Oscillator turned off (if RTC module is not running)
* Minimum power consumption

Exit from HALT mode is possible only by means of an external or LVD reset.

The following message is displayed on the LCD:

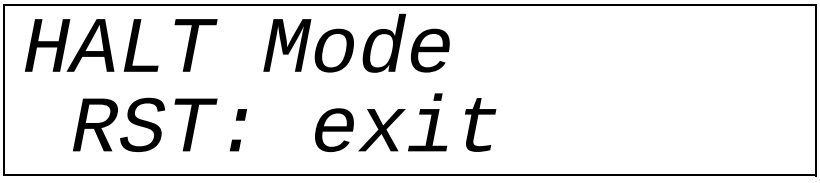

3.3.2.3 Run

STR730 provides a Power, Reset and Clock Configuration Unit (PRCCU) and a Clock Monitor Unit (CMU) which allows the user to configure the system clock.

Selecting this item shows how an application can be run at different clocking frequencies. Blinking LEDs show the effect of changing the clock.

The following message is displayed on the LCD:

The RUN menu contains five submenu items:

– ***"32 MHz"***: the application runs at 32 MHz.

– ***"16 MHz"*****:** the application runs at 16 MHz.

– ***"8 MHz":*** the application runs at 8 MHz.

– ***"4 MHz":*** the application runs at 4 MHz.

The user has to press the "SEL" push button to select one of the listed run modes. "BACK" button has to be pushed to exit from any selected mode and return to 32 MHz as default clock value.

3.3.3 Temperature

This menu allows you to display the ambiant temperature. The STR730 microcontroller provides a 10-bit Analog to Digital Converter (ADC), with +/-2 LSB maximum error and an input range of 0 to 5V.

Reading the LM35 output voltage through the ADC channel1, the ambiant temperature can be measured in the range: 0°C to 150°C.

Figure 6. Peripherals used by Temperature software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
	P3.1 ADC channel1
TIM2	GPIO4 delay for blinking red LEDs
PWM0..5	GPIO2 blinking bicolor LEDs
PWM1	GPIO2 delay for blinking bicolor LEDs
EIC	NEXT/PREV/SEL/BACK buttons (navigating through the menus)
	GPIO2 bicolor LEDs blinking delay: PWM1
	GPIO4 red LEDs blinking delay: TIM2
	Read ADC converted result on channel1: ADC
ADC	Convert the LM35 output signal on channel1

The user is asked to choose the temperature unit (°C or °F), this sub-menu contains two items:

3.3.3.1 Celsius Unit

When you select this sub-menu the temperature is displayed in Celsius. The temperature value changes at each end of conversion (EOC) of the ADC and is then updated on the LCD. The following message is displayed on the LCD:

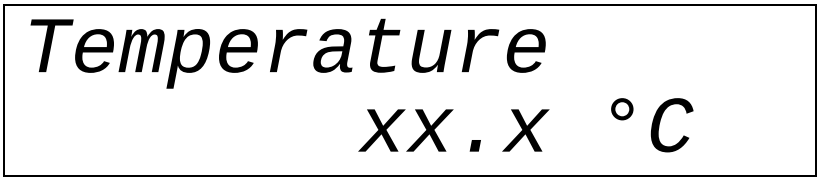

3.3.3.2 Fahrenheit Unit

When you select this sub-menu the temperature is displayed in Fahrenheit. The temperature value changes at each end of conversion (EOC) of the ADC and is then updated on the LCD. The following message is displayed on the LCD:

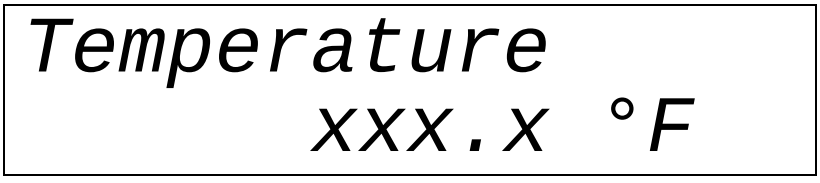

3.3.4 Melodies

The STR730 microcontroller provides Timers and PWMs modules which can be used for timing purposes and generating the output signals. In this case, we use an standard Timer (TIM) and a Time Base timer (TB) to generate a PWM signal with a tunable frequency and

duty cycle which, with an external piezo buzzer, allow you to generate musical notes. There are three melody buffers which are loaded in the BSPI EEPROM when the demonstration starts. When a melody is selected, its corresponding buffer is automatically read from the BSPI EEPROM and then used to generate notes.

Switch SW10, has to be set in position 1-2 to connect the buzzer to the TIM1 Output Compare A (OCMPA).

Table 3. Peripherals used by Melodies software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
	P3.0 ADC channel0
	P1.7 TIM1 Output Compare A
TIM2	GPIO4 delay for blinking red LEDs
PWM0..5	GPIO2 blinking bicolor LEDs
PWM1	GPIO2 delay for blinking bicolor LEDs
EIC	NEXT/PREV/SEL/BACK buttons (navigating through the menus)
	GPIO2 bicolor LEDs blinking delay: PWM1
	GPIO4 red LEDs blinking delay: TIM2
	End of TB0 count
TIM1	Generate the note frequency: used in PWM mode
TB0	Count the note duration
ADC	Adjust sound volume using potentiometer
DMA	Transfer data from BSPI receive FIFO
BSPI	Read melody data from SPI EEPROM

You can play a melody only once by selecting "single mode" or play it continuously by selecting "single repeat" mode. The volume can be adjusted using the potentiometer connected to ADC channel0.

3.3.4.1 Single Mode

In this sub-menu the selected melody is played only once. The melody can be stopped when the "BACK" push button is pressed.

– ***"Melody 1"***: When selected, it plays melody 1.

– ***"Melody 2"***: When selected, it plays melody 2.

– ***"Melody 3"***: When selected, it plays melody 3.

The following message is displayed on the LCD:

3.3.4.2 Single Repeat Mode

In this sub-menu the selected melody is played in a continuous mode till the "BACK" push button is pressed.

– ***"Melody 1"***: When selected, it plays melody 1.

– ***"Melody 2"***: When selected, it plays melody 2.

– ***"Melody 3"***: When selected, it plays melody 3.

The following message is displayed on the LCD:

3.3.5 Period Measure

This menu allows you to measure the period of an input signal. The STR730 TIM timers can be used in PWM input mode to measure the frequency and the duty cycle of an input signal in a range which depends on the TIMx clock: in our case the range is from 488 Hz to 10 kHz. You have to connect the signal to be measured to the ICAPA4/P1.3 pin.

Table 4. Peripherals used by the Period Measure software

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
	P1.3 TIM4 input capture A
TIM2	GPIO4 delay for blinking red LEDs
PWM0..5	GPIO2 blinking bicolor LEDs
PWM1	GPIO2 delay for bicolor LEDs
EIC	NEXT/PREV/SEL/BACK buttons (navigating through the menus)
	GPIO2 delay for blinking bicolor LEDs: PWM1
	GPIO4 delay for blinking red LEDs: TIM2
	End of TB1 count
TIM4	Measure the frequency and duty cycle of the input signal
TB1	Display the frequency and duty cycle values periodically (300ms)

If the input signal is in the specified range, the following message is displayed on the LCD:

If the signal is under the low limit of the range, the following message is displayed on the LCD:

If the signal is over the high limit of the range, the following message is displayed on the LCD:

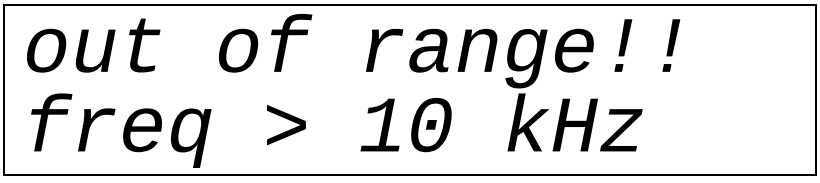

If there is no signal connected to the ICAPA4/P1.3 pin, the following message is displayed on the LCD:

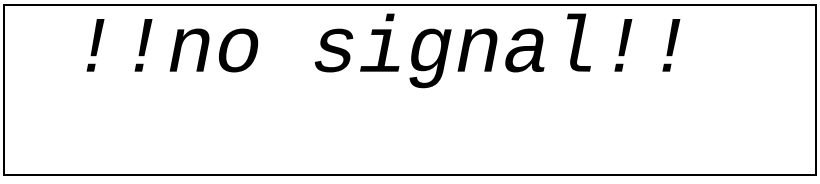

3.3.6 Board test

This test consists of checking the different components of the board and the STR730 peripherals.

Table 5. Peripherals are used by the Board test software:

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 blinking red LEDs
	GPIO2 blinking bicolor LEDs
	Generate sound using buzzer

STR730 peripheral used	Purpose
ADC	GPIO4 red LEDs lighting select using potentiometer
	Temperature measurement
I2C	Write/Read on I2C EEPROM
BSPI	Write/Read on BSPI EEPROM
UART0	UART test board
UART1	UART test board

The board test is made of the following sub-menus:

3.3.6.1 Start Test

You select this sub-menu to start the various board tests.

After each test the user is asked to store the test result. Press the "SEL" push button if the test is passed, else press the "BACK" push button if test has failed.

These tests are:

– PushButtons Test: tests all the connected push buttons which are "SEL", "BACK", "WAKE-UP", "NEXT" and "PREV". The following message is displayed on the LCD:

– Red LEDs test: Successively lights up the red LEDs connected to GPIO4. The following message is displayed on the LCD:

Press "NEXT" to select whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK".

– PWM LEDs test: Successively lights up the bicolor LEDs connected to GPIO2. The following message is displayed on the LCD:

```
PWM Leds Test
  Press ^Next^
```

Press "NEXT" to select whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK".

– LM35 test: tests if the temperature sensor works correctly and displays the temperature value in Fahrenheit. The following message is displayed on the LCD:

```
LM35 Test
xx.x °F /^Next^
```

Press "NEXT" to select whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK".

– Varistor test: tests whether the potentiometer connected to Channel0 of the ADC works correctly. The number of the red LEDs turned on corresponds to the potentiometer output voltage. The following message is displayed on the LCD:

```
Var Resist Test
  Press ^Next^
```

Press "NEXT" to select whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK".

– Buzzer test: tests whether the buzzer works correctly on both positions of switch SW10. For the first test, switch SW10 has to be in 1-2 position.

The following message is displayed on the LCD:

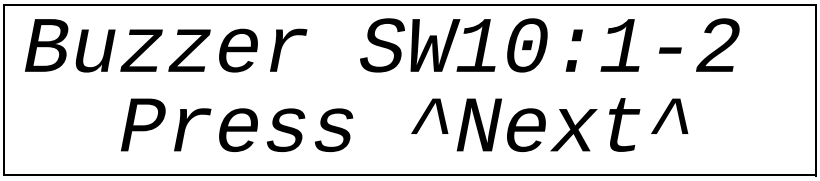

Press "NEXT" to display whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK". Then change switch SW10 to position 2-3.

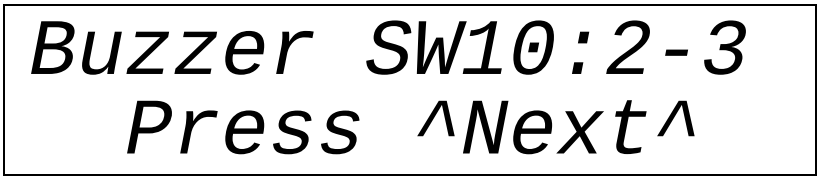

Press "NEXT" to display whether the current test is passed or failed.

Press "SEL" when the test is passed else press "BACK".

– I2C test: Testing Write/ Read operations on I2C EEPROM.

Once the test is finished, a message is displayed indicating whether the I2C test is passed or failed.

Then, the following message is displayed on the LCD:

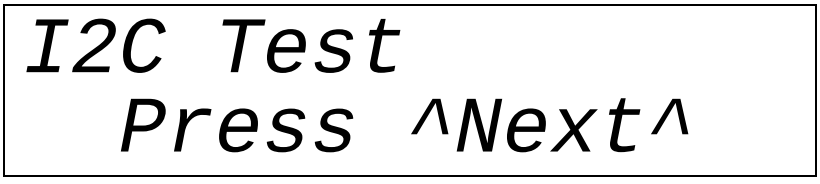

Press "NEXT" to start the next test.

– BSPI test: Testing Write/ Read operations on SPI EEPROM.

Once the test is finished, a message is displayed indicating whether the BSPI test is passed or failed.

Then, the following message is displayed on the LCD:

Press "NEXT" to start the next test.

– UART test: Testing a transmission and reception between UART0 and UART1. For this test you have to connect a null-modem female/female RS232 cable between the two DB9 connectors on the evaluation board (CN2-CN3).

Once the test is finished, a message is displayed indicating whether the UART test is passed or failed.

The following message is displayed on the LCD:

Press "NEXT" to exit the board test sub-menu.

3.3.6.2 Test Report

This sub-menu offers the possibility of showing the result of all tests done in the "Start Test" sub-menu.

If you select this sub-menu before starting the test, the following message is displayed twice on the LCD:

After selecting this sub-menu, the result of all the board tests is displayed, it is failed if at least one test was not correct, else passed if all tests are done successfully. The following message is displayed on the LCD:

If some tests were failed, a second message is displayed which contains in the first line the number of the failed test, and in the second line the name of those tests which you can display one-by-one using the "NEXT" and "PREV" push buttons. The following message is displayed on the LCD:

To exit from the "Test Report" sub-menu, press the "BACK" push button.

3.3.7 Screen Saver

The STR730 Watchdog Timer module (WDG) can be used in Watchdog mode to reset the system or can be used in Timer mode to generate an interrupt after a selected time delay depending on the system clock.

In this demonstration software the WDG module is enabled in Timer mode and generates an End of Count interrupt, that sets a screen saver display when the WDG timer reaches a specified time delay. If none of the push-buttons are pressed during this delay which is 30 seconds, the screen saver is displayed on the LCD. As soon as a push button is pressed, the last sub-menu is re-displayed on LCD.

The following table summarizes which peripherals are used in this software part:

STR730 peripheral used	Purpose
GPIOs	NEXT/PREV/SEL/BACK button (Pin configuration)
	Driving the LCD
	GPIO4 red LEDs blinking
TIM2	GPIO4 red LEDs blinking delay
PWM0..5	GPIO2 bicolor LEDs blinking
PWM1	GPIO2 bicolor LEDs blinking delay
EIC	GPIO2 bicolor LEDs blinking delay: PWM1
	GPIO4 red LEDs blinking delay: TIM2
	End of WDG Timer count
WDG	Count the 30 seconds and if enabled set the screen saver mode

When the demonstrations enter in screen save mode, the date and time are displayed on the LCD as shown in the figure below. The time and date are continuously updated:

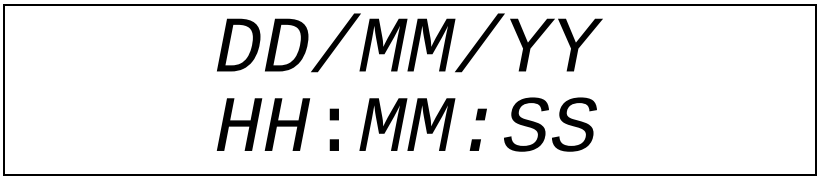

Using the WDG functions, we are can enable or disable the screen saver for each demonstration sub-menu. It is disabled in five sub-menus which are: Time Adjust, Date Adjust, Alarm Adjust, Period Measure and Board test.

3.4 SOFTWARE ARCHITECTURE

This section describe the software architecture it is divided into two layers:

– **Hardware library layer**: contains the software library source files. These do not need to be modified by the user:

* 73x_conf.h: the header file to configure which peripherals are used, and miscellaneous defines

* 73x_type.h: contains the common data types and enumerations used in the other files

* 73x_map.h: contains the peripheral memory mapping and register data structures

* 73x_lib.h: main header file including all the others

* 73x_it.h: contains the interrupt handler prototypes

* 73x_it.c: the source file containing the interrupt handlers

– **Demonstration architecture**: contains the architecture of the demonstration software that may be modified by the user:

* menu.h: Header for the menu.c file.

* menu.c: This file provides a set of functions needed to manage the demonstration menu

* timesetting.h: Header for the timesetting.c file

* timesetting.c: This file provides functions for managing time, date and alarm events

* lowpower.h: Header for the lowpower.c file

* lowpower.c: This file provides low power modes functions

* periodmeasure.h: Header for the periodmeasure.c file

* periodmeasure.c: This file provides functions for measuring the period and the duty cycle of an external signal

* temperature.h: Header for the temperature.c file

* temperature.c: This file provides functions for displaying the temperature measured by the LM35 sensor

* buzzer.h: Header for the buzzer.c file

* buzzer.c: This file provides functions for playing melodies

* leds.h: Header for the leds.c file

* leds.c: This file provides functions for managing red LEDs connected to GPIO4 and bicolor LEDs connected GPIO2

* lcd.h: Header for the lcd.c file

* lcd.c: This file provides a set of functions needed to manage the LCD connected to P0.(0..10) pins

* i2c_ee.h: Header for the i2c_ee.c file

* i2c_ee.c: This file provides a set of functions needed to manage the I2C M24C08 EEPROM

* spi_ee.h: Header for the spi_ee.c file

* spi_ee.c: This file provides a set of functions needed to manage the SPI M95080 EEPROM

* boardtest.h: Header for the boardtest.c file

* boardtest.c: This file provides functions for testing the STR73x-EVAL board.

* main.h: Header for the main.c file

* main.c: This file provides a set of functions needed to manage the demonstration menu

Figure 7. Software Architecture

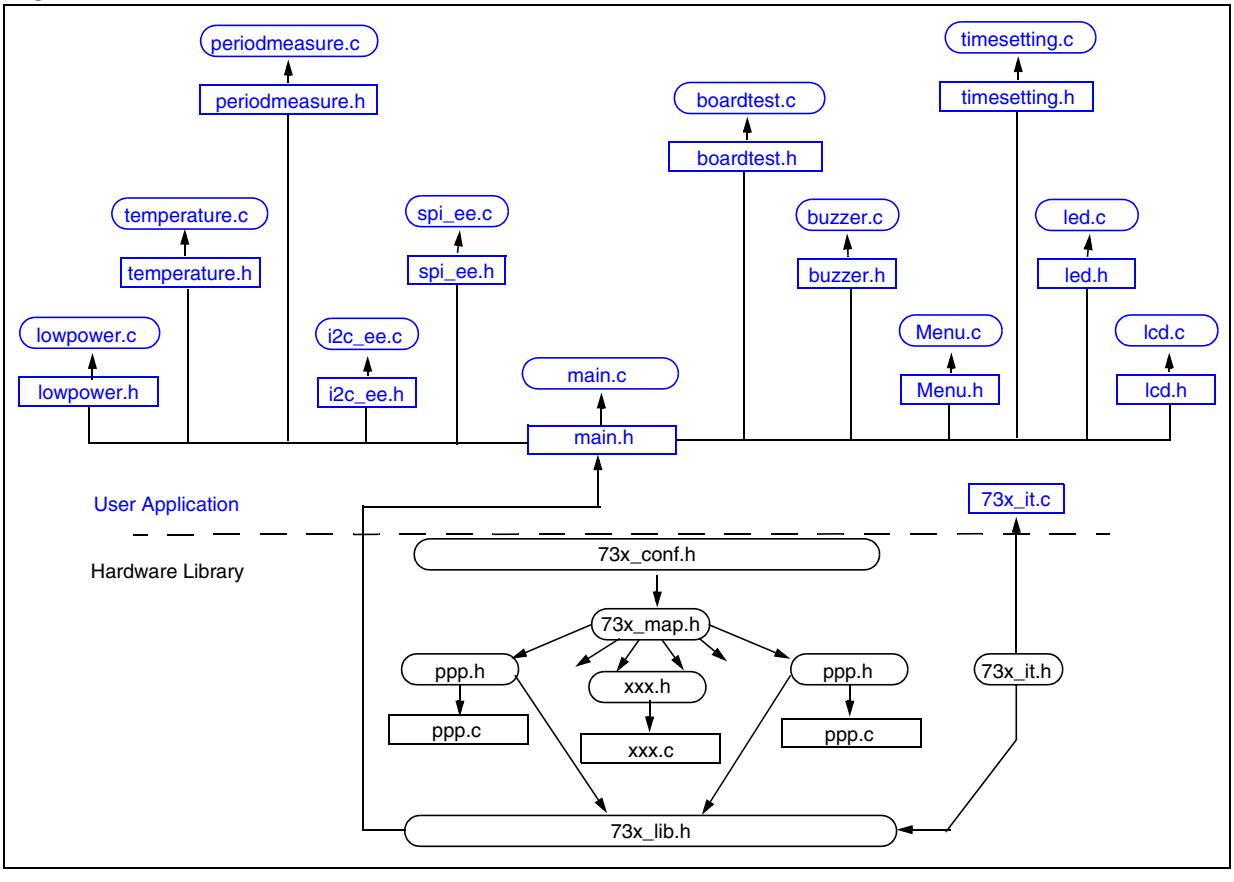

THE SOFTWARE INCLUDED IN THIS MANUAL IS FOR GUIDANCE ONLY. STMICROELECTRONICS SHALL NOT BE HELD LIABLE FOR ANY DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES WITH RESPECT TO ANY CLAIMS ARISING FROM USE OF THE SOFTWARE.

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without express written approval of STMicroelectronics.

The ST logo is a registered trademark of STMicroelectronics.

All other names are the property of their respective owners

© 2005 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia – Belgium - Brazil - Canada - China – Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com